

















OT-610-BROWN


YN012 ASSEMBLY INSTRUCTION

Thanks for buying our products, read it carefully before installation.
 Please contact us in case of any problem, regarding assembly or the product itself, a smile on your face is our top priority.
 (Attention: Don't tighten the screw before all screws are in place)


					
A*10	B*10	C*56	D*1	E*20	F*1

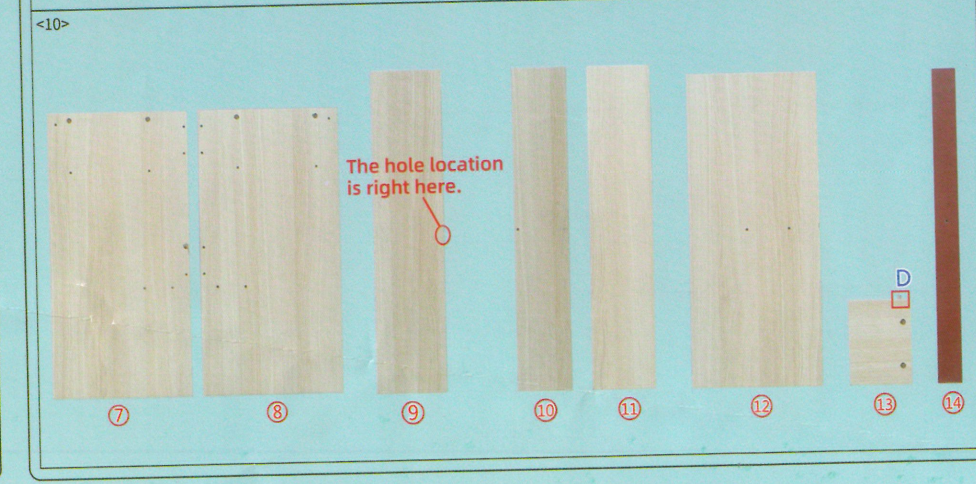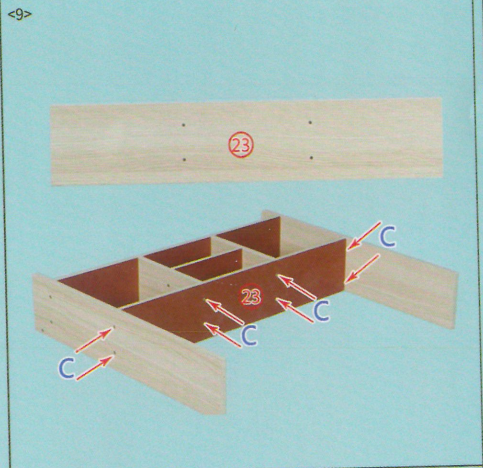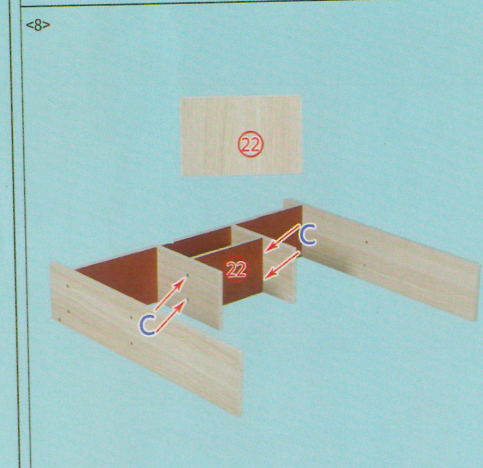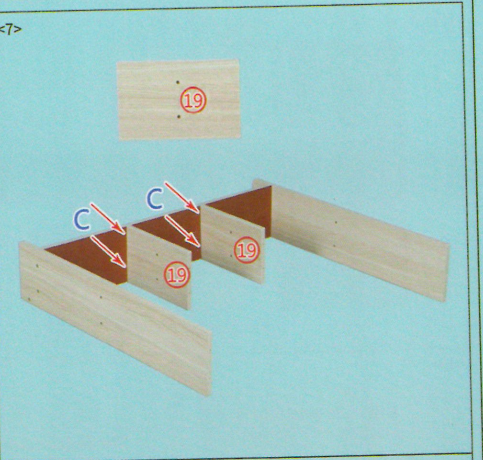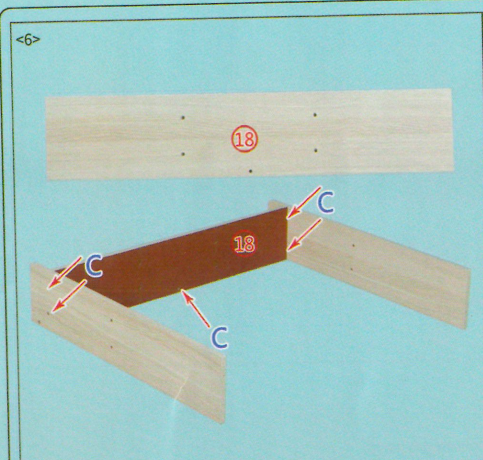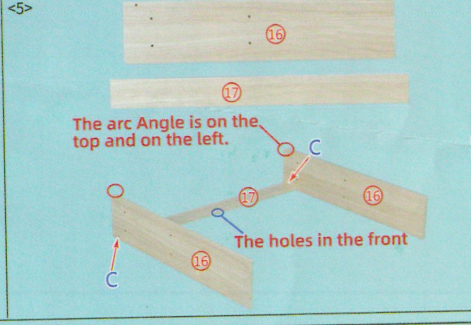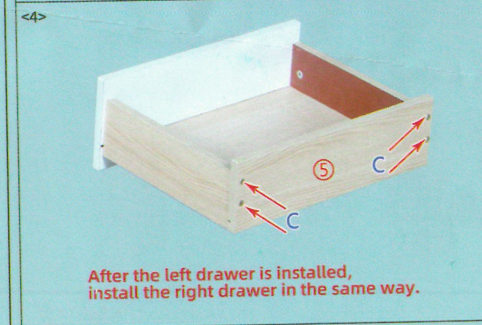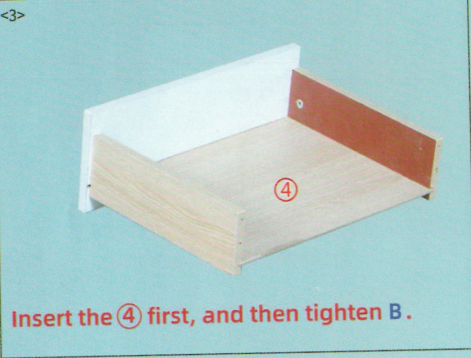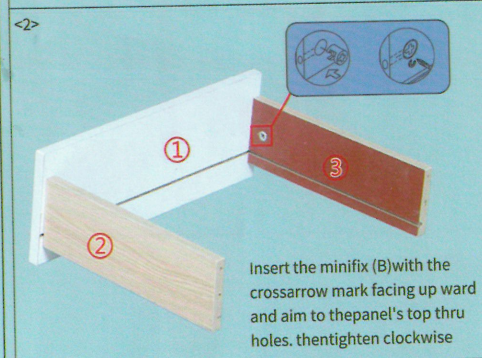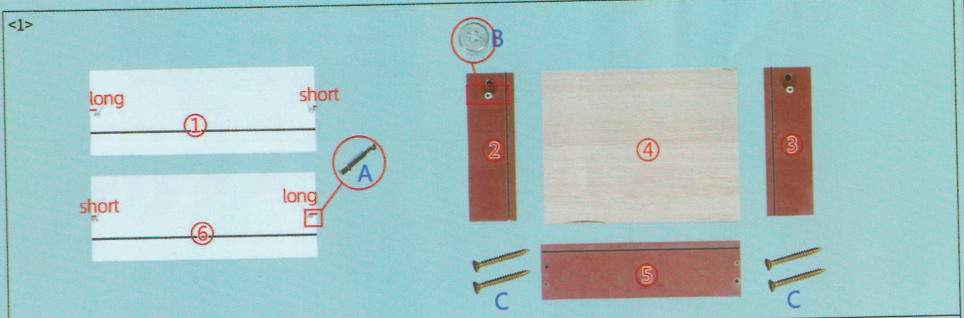


<11>

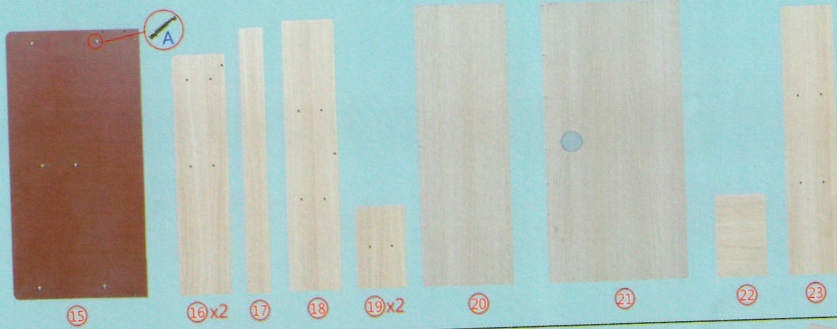


<12>

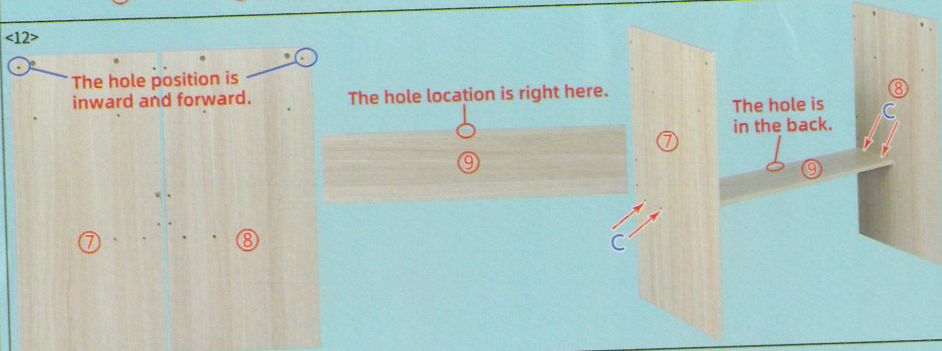


<13>

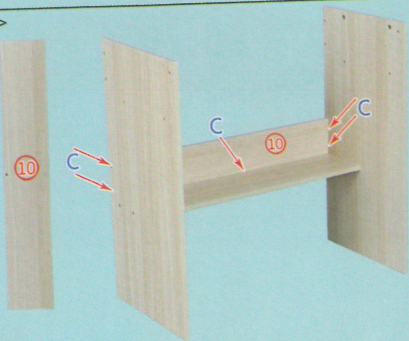


<14>

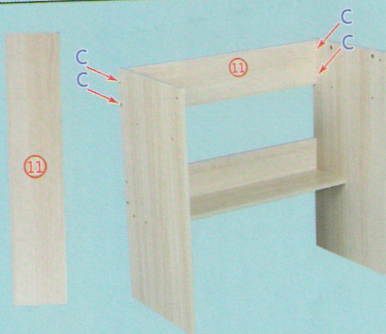


<15>

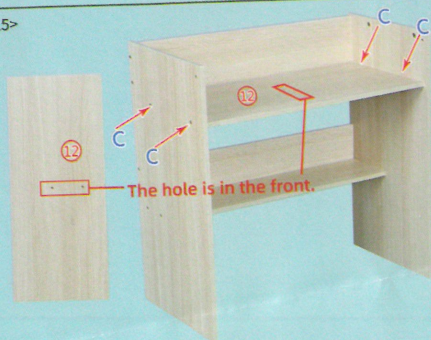


<16>

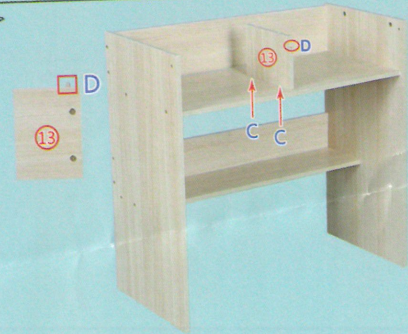

<17>

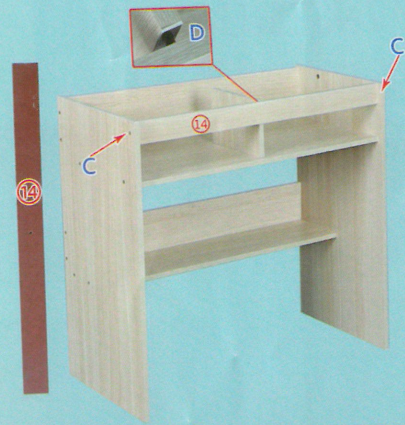


<18>

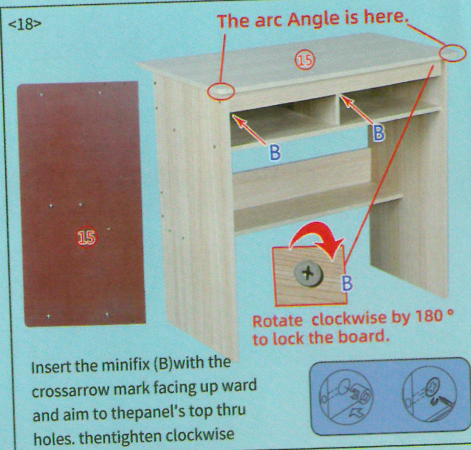

<19>



<20>

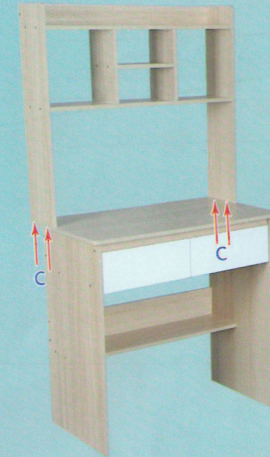

<21>

